




# Sony Cyber-shot DSC-T500 Tripod Receptacle Replacement

The Cyber-shot DSC-T500 comes ready to attach to a tripod. If the receptacle gets damaged, this guide will show how to replace it.

Written By: Chelsea Vitone

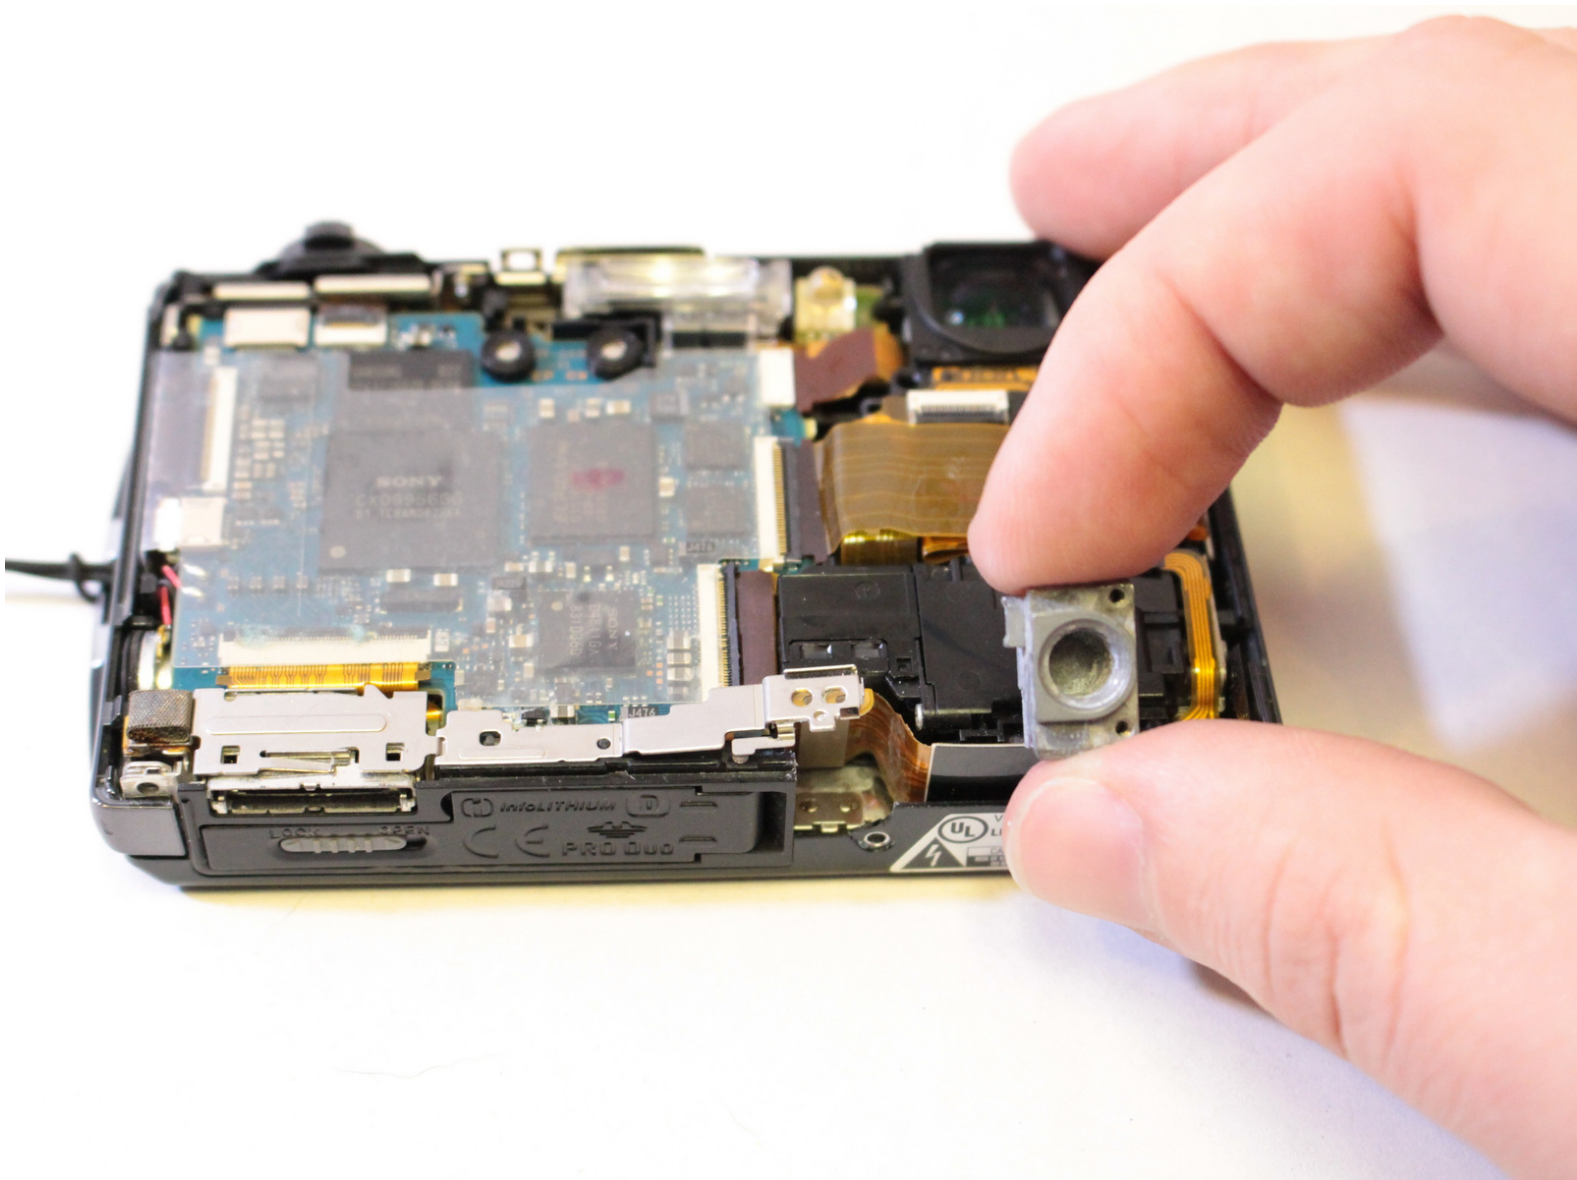

## INTRODUCTION

By following 4 easy steps, you will be able to open the camera, locate the tripod receptacle, and replace it.


---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Front Panel

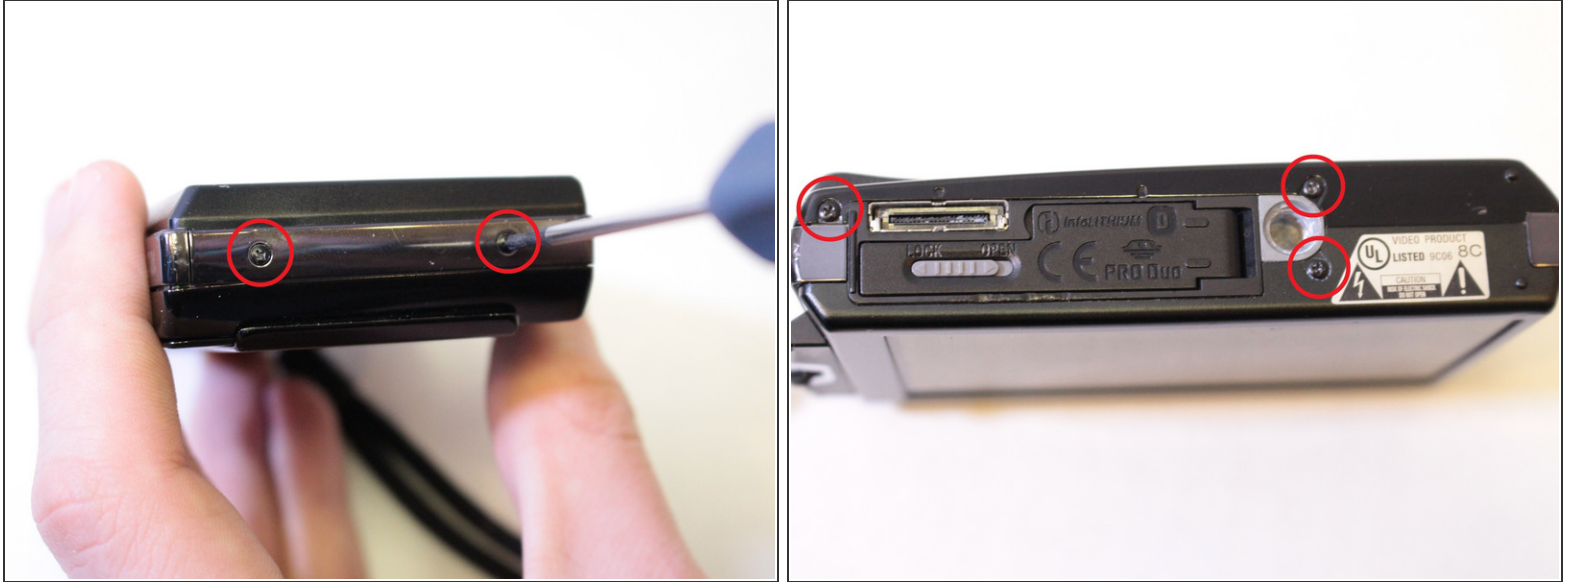

- Remove all seven black 4 mm Philips #00 screws holding the front panel into place. Two on each of the sides of the camera and three on the bottom.



## Step 2

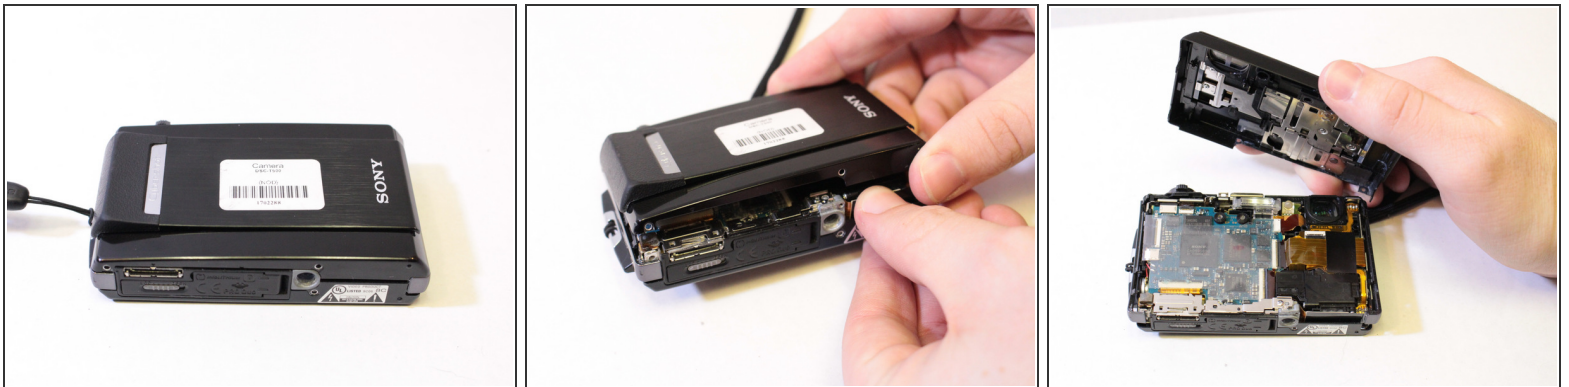

- Gently lift the front panel up off the back of the camera prying up around the edges using a plastic opening tool or spudger if necessary.





### Step 3 — Remove Inner Screw

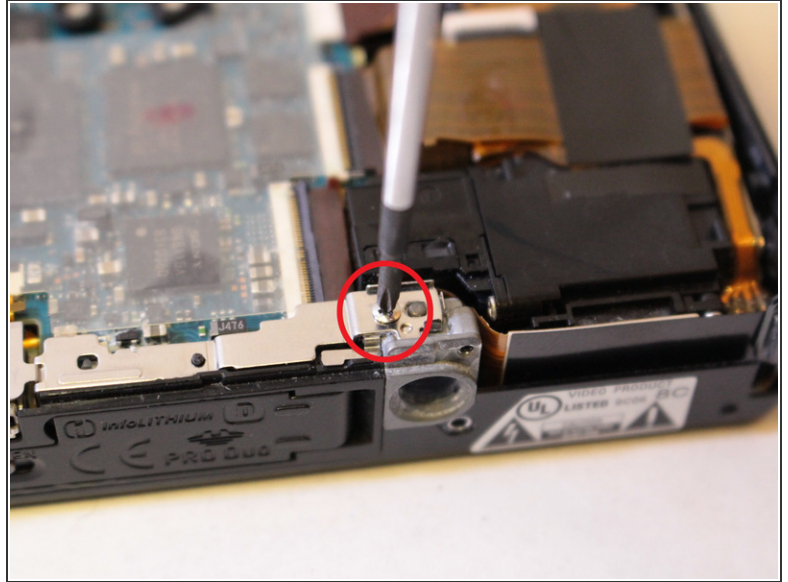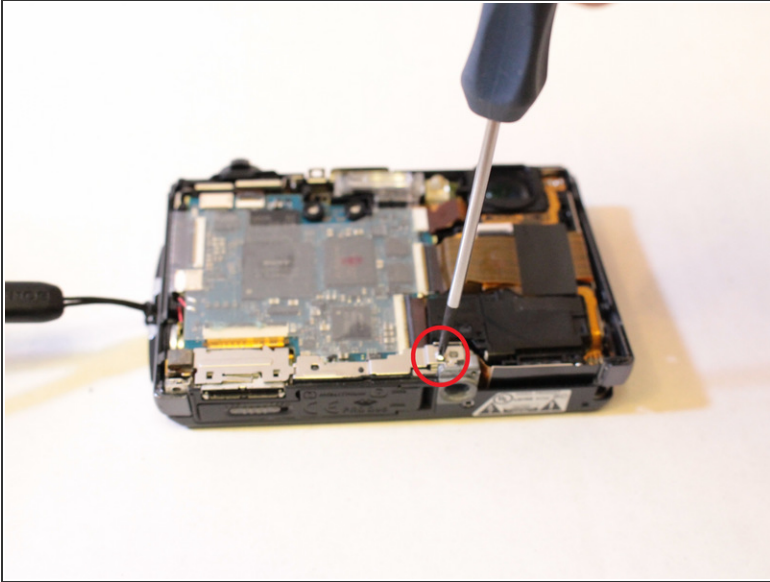

- Remove the one silver 4mm Philips #00 screw that is holding the receptacle in place near the bottom of the camera.
- ⓘ There is one other screw just like this one on the top of the camera near the capture button. That's not the one you want to remove here

### Step 4 — Remove Tripod Receptacle

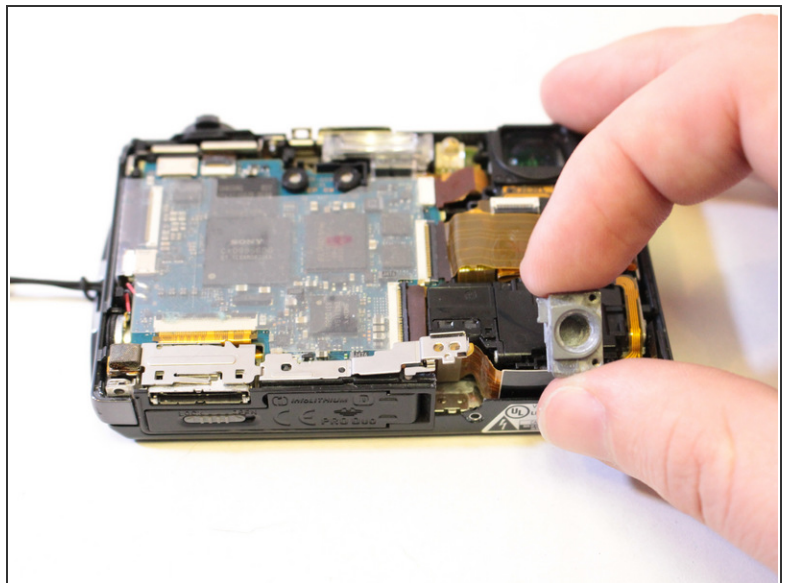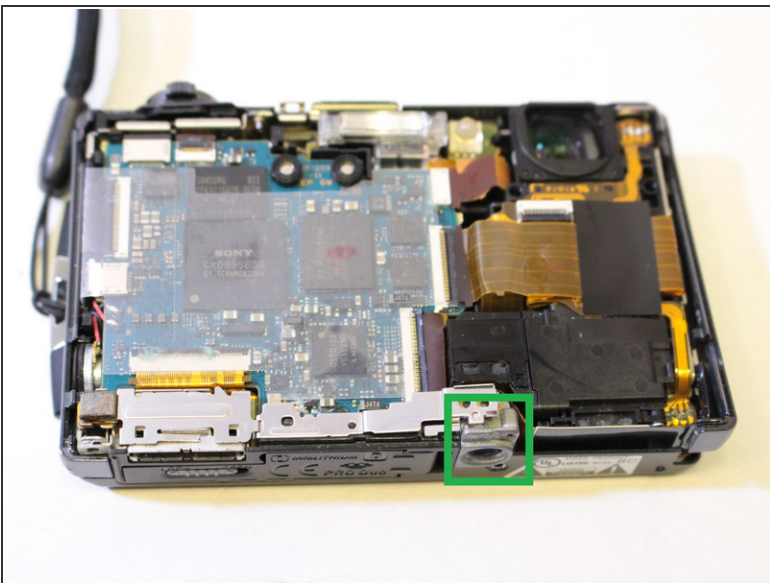

- Remove the tripod receptacle by simply lifting it out with your hands or with tweezers if necessary.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 11:20:29 AM.